



ABC 21 WASH

ABC 21 Wash is a special blend of solvents, detergents and rejuvenators providing the printer with an effective, powerful cleaner for blankets, rollers and dampers. Partially water miscible, when used in conjunction with water it will quickly remove gum glaze and lint as well as ink, leaving blankets and rollers with a velvet-smooth, ink receptive surface.

- Cleans quickly and thoroughly
- Reduces blanket tack
- Prevents oxidation and swelling of the rubber
- Keeps rollers and blankets ink-receptive

DIRECTIONS FOR USE

Blankets: Apply ABC 21 Wash either neat or on a water damp cloth. After removing the ink film, wipe away any excess with a dry cloth.

Rollers: Apply in the usual way either neat or mixed with water. For thorough cleaning and removal of gum glaze and lint apply ABC 21 Wash neat and rinse off with water.

Dampers: ABC 21 Wash can be used for either machine or hand washing of dampers. Apply, scrub and rinse clean with water.

